


11 | Emergency Power Supply

When the battery power is lower than 4.8v, the voice guide will notify with a message. Battery replacement will need to be done.





(Please use good alkaline batteries and do not mix new with old batteries)

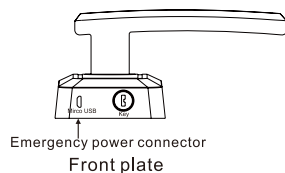


The system will shut down when batteries are empty. To revive the system, connect a micro USB power connector to the emergency power supply located at the bottom of the front plate.

12 | Unlock by Emergency Mechanical Key

Stick the key in the key hole, rotate 180° to the right, then pull the handle down to open the door.

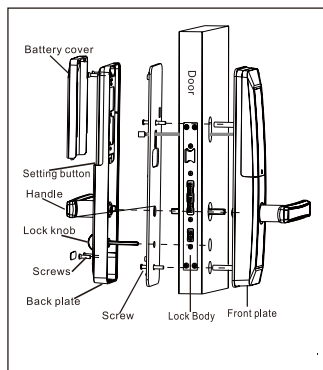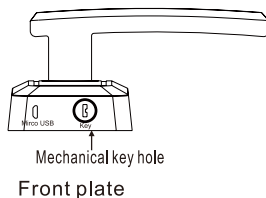

Installation with back panel and back plate

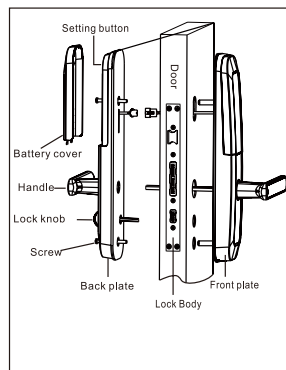

Installation with metal plate fixing on the back plate

Technical parameters:

Power supply	4.5v - 6.5v
Typical dynamic current	< 50μA
Operation current	< 250mA
Fingerprint + Card + Passcode	< = 300 users
Actuator	DC micro - motor
Working temperature	-10°C -- 70°C
Working humidity	5% -- 95%

Instruction Manual


01 | Menu

Enter Menu

Touch to activate the keypad. Press * followed by 1#




Note: Navigate through the keypad: 2 is up, 8 is down, backspace and # to confirm input. Default passcode is 123456.

02 | Create New User

 


*Admin/User ID: Press # to automatically choose the next available ID number.

   **Enter New Login: Card: Scan the smart card against the panel. FP: Place your fingerprint on the fingerprint touch sensor. PC: Enter your passcode on the keypad (4-10 digits).



 
Unlock Account: Input 00:00 >>> 00:00 as the time period.




Alarm Code: When this code is activated, the lock will sound an alarm to alert the surroundings of potential theft/burglary.

Change Admin Passcode: Select "Edit Passcode". Enter the current passcode followed by the new passcode.


03 | Delete User

 


 


Note: The current admin login details can't be deleted.


04 | System Settings

 


Note: The system can store up to 399 unlock records.

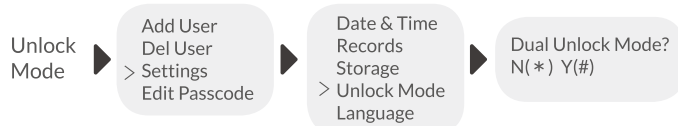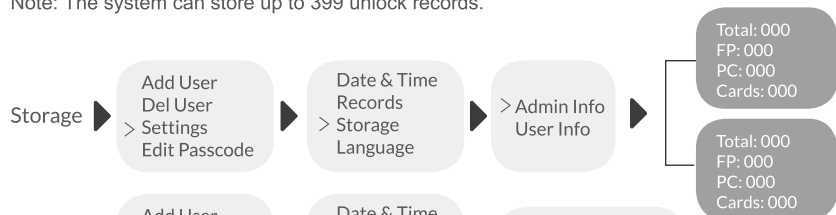


Note: Default unlock mode is single. Dual unlock mode requires 2 ID unlock verifications before access is granted.

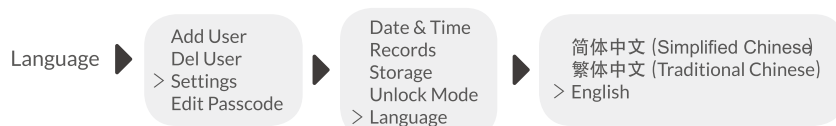

05 | Voice Guide

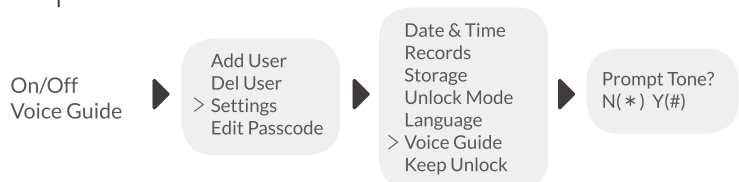


06 | Keep Unlock Mode

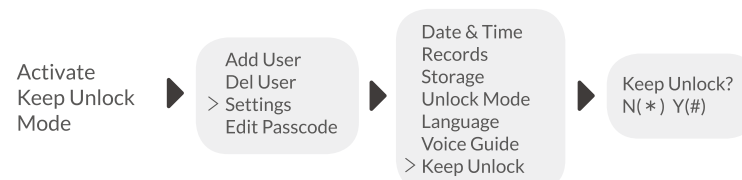

In Always-Open mode, the door will remain unlocked.
Press # on the keypad or enter login info to exit from Always-Open mode.

07 | Edit Passcode

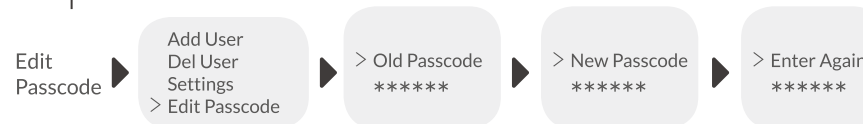

08 | One-Time Passcode


- Step 1: Download the WeChat App (Available on App Store & Play Store).
- Step 2: Open the Smart Lock mini program.
- Step 3: Enter admin passcode and press one-time passcode.
- Step 4: The one-time passcode has been generated.

Note: Validity of passcode lasts for 10 minutes and is for one time usage.


ADVANCED FUNCTIONS AND EMERGENCY USAGE

09 | Reset to Default

Press and hold the DEL button on the back lock, meanwhile put on the batteries. Display shows initializing. It starts initializing after 5 seconds.
When buzzer long beeps, the initialization is complete.
All the user information and unlock records will be deleted. The default password is 123456.

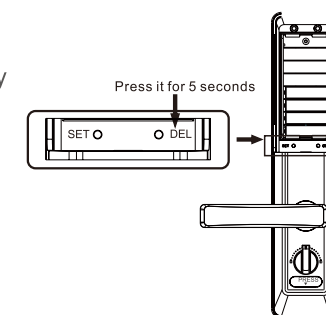

10 | Lock Knob Interior

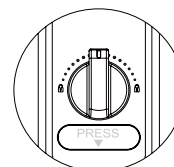

Note: When the interior lock knob is locked, the door is unable to be opened with the handle.